


# Environmentally Safe, UV Curable Masking Resins Reduce Aircraft Component Processing Costs

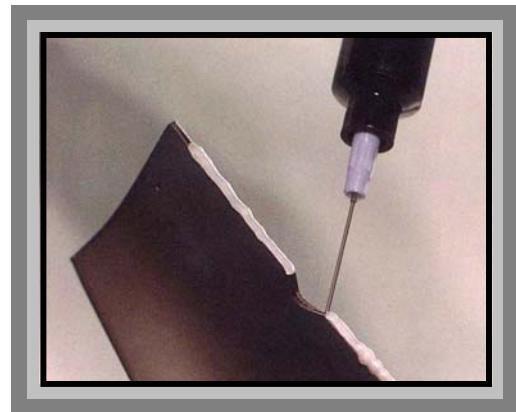

by Richard Golebiewski

As presented at:

The Aerospace/Airline Plating Forum & Exposition  
Orlando, Florida USA

August 27-29, 2002

Used with permission of the American Electroplaters  
and Surface Finishers Society, Inc.

A family of solvent-free, UV curable temporary masking resins has been developed to simplify component masking processes prior to surface preparation and finishing operations. These resins cure in seconds under UV light and provide superior protection during machining, laser drilling, grit blasting, shot peening, acid stripping, plating, and thermal spray coating. Their ease of application, speed of cure, and consistent reliability surpasses that of waxes, tapes, lacquers, and other slow curing, solvent-based maskants. This improved technology offers substantial cost savings through reductions in labor, rework and scrap. The UV masking resins are available in several viscosities and can be applied by spraying, dipping or brushing. The resins are grouped to offer three methods of removal: incineration, peel, or solubility in water.

**For more information, contact:**

DYMAX Corporation  
51 Greenwoods Road  
Torrington, CT 06790 USA  
Phone: 860-482-1010  
Fax: 860-489-8337

© 2002, 2005 DYMAX Corporation

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. DYMAX does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in DYMAX's standard Conditions of Sale. DYMAX does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than DYMAX or act as a grant of license under any DYMAX Corporation Patent. DYMAX recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide.

LIT169 REV. 8/2005

**DYMAX Corporation** - 51 Greenwoods Road - Torrington, CT 06790 - Phone: 860-482-1010 - Fax: 860-496-0608  
E-mail: [info@dymax.com](mailto:info@dymax.com) - [www.dymax.com](http://www.dymax.com)

**DYMAX Europe GmbH** - Trakehner Strasse 3 - D-60487 Frankfurt am Main - Germany - Phone: 0049-69-7165-3568  
Fax: 0049-69-7165-3830 - E-mail: [dymaxinfo@dymax.de](mailto:dymaxinfo@dymax.de)



DYMAX®, Light-Weld®, Light-Welder®, Multi-Cure®, Ultra Light-Weld®, MEDI-CURE® and MD® are trademarks of DYMAX Corporation

## Introduction

Masking of components and surfaces is a necessary part of every surface finishing process. Whether for abrasive cleaning, acid stripping, shot peening, plasma spray, or plating, masks act as a self-sacrificing barrier for surface protection. The process of masking may seem simple enough, but a thorough analysis reveals that it can add significant costs to any operation. These costs may not be readily visible, as the masking material is typically not the major contributing element to cost. Rather, it is the masking process itself, specifically the labor, that can be the major cost factor. The more intricate a component, the longer it takes to apply and remove traditional masks, such as tapes, waxes, and solvent-based lacquers. In addition, there are other hidden costs associated with using these masks. They can include scrap, component rework, production bottlenecks, workman's compensation claims, and higher insurance premiums. When the cost of labor is factored in with the other hidden costs, it becomes apparent that simply using a lower priced masking material will not provide the desired cost savings that are required for greater competitiveness in the market.

When traditional paths cannot offer tangible savings opportunities, the door must be opened to new technology. Such technology is now available with UV Curable Masking Resins.

## UV Masking Resin Technology

The technology for Ultraviolet (UV) Curable Masking Resins originated from UV Curable Aerobic Acrylic Adhesives and Coatings. Commercialized in the early 1980's, Aerobic Acrylic Adhesives and Coatings have provided new efficiencies to manufacturers, resulting in millions of dollars in cost savings. Significant contributions include:

**Increased thru-put.** UV Curable Aerobic Acrylics take seconds to cure instead of hours. Curing bottlenecks are eliminated, resulting in significant productivity gains.

**Worker and Environmentally Friendly.** UV Curable Aerobic Acrylics do not contain solvents, eliminating special handling requirements and costly ventilation systems.

**Minimal Capital Investment.** UV Curable Aerobic Acrylic Adhesives and Coatings are cured with lamps that produce ultraviolet energy. Lamps of many styles are available at moderate cost. Investment in an average UV curing system is typically recovered in the first year of operation, or sooner.

**Easily Integrated into Automated Production.** UV Curable Aerobic Acrylics can be dispensed in a variety of ways including bead placement, dip, spray, pad print or screen print. UV curing lamps are easily placed into existing production lines, utilizing minimal space for curing.

First introduced in the mid 1990's, UV Curable Masking Resins have the potential to provide similar, if not greater, cost reductions in the current plating and surface finishing industry. The ability to apply a UV maskant and cure it instantly facilitates uninterrupted component processing. For ease of use, UV Masking Resins offer several viscosity variations, from the consistency of water to non-flowing gels. This permits controlled coverage, including coating depth, in a single application. UV Curable Masking Resins are easily dispensed, both in manual and fully automated processing lines. Conventional, labor-intensive masking can be replaced with semi-automated or automated systems that provide controlled spraying, dipping, or precision placement of the UV curable, liquid masking resin. The superior adhesion and exceptional resiliency of UV Curable Masking Resins can also improve component quality by reducing post-processing rework and scrap, arising from deficiencies in traditional masking methods and products. The durability of UV Curable Masks makes it possible to mask only once for multiple surface processing operations, eliminating stripping and remasking between processes. Simply stated, this increased efficiency leads to lower cost.

## Current Masking Methods

The most popular products in today's masking applications include tapes, waxes, lacquers, and reusable boots and plugs. These products have been used for years, sometimes interchangeably

within the same process. Until recently, very few new alternative products have been made available for temporary protective masking. The following offers a brief overview of traditional masking products:

## **Tapes**

Masking tapes range in composition from simple, low-cost paper tapes typically associated with painting, to expensive, heat-resistant polyester, polyimide and silicone used in high temperature surface finishing. Tapes are dispensed from a roll and are cut to fit the area to be masked. Some can be purchased in die-cut shapes, but this can be costly and is usually limited to high volume production of a single component configuration.

Pressure sensitive adhesive backing allows the tape to adhere to surfaces. Unfortunately, residue from the tape's adhesive can remain on the surface after the tape is removed. A subsequent cleaning operation is often required to remove the residue.

Tapes are durable enough for most masking applications involving one cycle of a dry process, such as shot peening or grit blasting. However, particulate often finds its way under the tape into inner core cavities, necessitating secondary removal and cleaning operations. Cleaning and plating baths also expose inadequacies in the manual tape application process. The liquid baths creep under the edge of the tape and flow quickly through creases and areas of low adhesion between the tape and component surface.

Masking with tape is perhaps the most labor-intensive masking process. Tapes are applied by hand, and in most cases of multiple surface processing operations, reapplied in the same areas due to abrasion and wear. It is not uncommon for an operator to spend 2 to 4 hours masking a single intricate component.

The taping process itself, in addition to being time consuming, can also create a hazardous work environment for employees. Despite the best protection, employees can sustain finger cuts from razor blades and from the tape itself. These injuries can result in lost time, workman's compensation claims and higher insurance premiums.

## **Waxes**

Wax is perhaps the least expensive material that can be used for masking. However, it is difficult to work with, as it must be heated above its melting point to apply (150° F or higher). Heating requires special handling equipment and thermal energy which can generate a surprisingly high utility cost. Operators also face the possibility of burns when repeatedly handling the hot wax. Typically, wax is poured into components to protect internal cavities. Parts with tight dimensions and serpentine pattern cavities must be pre-heated to allow proper flow of wax. Dipping is the only practical method of coating external surfaces, because hot wax cannot be applied in a controlled fashion.

Removal of wax requires the same melting process as application of wax, with the exception that the component must now be heated with the wax. Again, operators must take precautions to avoid being burned by the wax and the components. Wax removal is usually conducted in a hot water bath. Care must be taken to ensure all wax is removed from the components, and the water bath must be well filtered or replaced frequently to keep the water clean. Melted wax creates a film in the water which can be redeposited on the components as they are removed from the tank. An additional cleaning operation is often required after wax removal. If any residual wax remains in core cavities, it may be necessary to burn it off in a furnace.

The low melting point of wax limits or prevents its usage in high temperature surface treatment processes such as acid cleaning, plating, and deposition coating. In addition, wax is soft. Precautions must be taken during handling to prevent accidental damage to the coating which could result in rework and possible scrap.

## **Boots and Caps**

Boots and molded caps, typically made of rubber or vinyl, are used in high volume processing of components with no dimensional variations. Because the cost of molds can be quite high, it is cost prohibitive to have boots and caps molded for small volumes or components with varying configurations or dimensions. Thus, molded boots and caps are not universal masking media. Rather, they are very product specific.

Boots and caps rely on press fit tolerances and their elasticity to affix themselves to the components. However, this is not adequate protection for liquid processes like acid cleaning and plating. Boots and caps will eventually wear out after repeated use. They can also loosen and fall off during the process creating costly rework or scrap.

## **Lacquers**

Typical masking lacquers are solvent-based and require a prescribed curing time to allow the solvent to evaporate and the remaining resin to cure, or harden, on the components. This type of curing process requires the masked components to be stacked or racked and left undisturbed for several minutes to several hours. Not only is the process bottle-necked, but valuable production space is consumed with curing parts.

The solvents contained in many lacquers are the same solvents that are being restricted or banned in the workplace by governmental agencies for health and safety concerns. Evaporating solvents such as xylene, toluene, and other acetates, have been linked to respiratory problems and other long-term ailments. Elaborate exhaust and air handling systems are mandatory when using solvents and solvent based products in the workplace. In addition, solvents can be extremely flammable, posing another health and safety risk.

Solvents, and products containing solvents, must be carefully monitored in the work environment. The U.S. Environmental Protection Agency mandates that consumption reports be filed for all solvent-based products. Solvent-based waste must be recognized as hazardous material and disposed in accordance with strict guidelines. In addition to higher waste disposal costs, insurance premiums can be considerably higher for manufacturers using solvents and solvent-based products. For these reasons, many corporations have mandated that solvents be phased out of their facilities as soon as possible. Some water-based lacquers have been introduced to overcome the solvent issues. However, they do not possess the same strength as solvent-based lacquers, and they require the same prolonged curing time, which can vary based on air temperature and humidity.

Lacquers are predominantly watery, low-viscosity products. In order to provide adequate protection as a mask, it may be necessary to repeat the dispense and cure cycle several times to build the proper mask thickness. Multiple masking cycles create delay and add cost.

Finally, lacquer removal can be a difficult process. Typically, lacquer-masked components are first warmed, then soaked in a solvent such as acetone. The majority of the lacquer slumps off the components, but some patches remain on surfaces and in cavities. Additional labor may be necessary to remove the lacquer remnants through subsequent processes involving grinding and burning.

## **The New Masking Option: UV Curable Masking Technology**

Worker friendly and OSHA compliant, UV Curable Masks are solvent-free, low odor, non-flammable, liquid resins that cure in seconds upon exposure to ultraviolet light energy. They are specifically formulated to have no effect on the metallurgy of the surface being masked. These resins are urethane based, and contain no heavy metals, silica, or other compounds which can alter properties of the component surface or the finish being applied. Once cured, these resins can be handled like any industrial plastic. When removed by recommended methods, UV Curable Masking Resins leave no residue behind.

Uncured UV Masking Resins possess a high degree of stability which permits long shelf life (up to a year) when stored under ambient conditions (50-90° F). Refrigerated storage is not required. These resins are single component formulations, eliminating the need to measure and mix prior to using. The UV Curable Masks are available in a variety of containers to accommodate any dispensing system, ranging from small syringes to bulk packaging measured by volume or weight.

While some may be simple formulations and others more complex, UV masking resins are typically comprised of five basic elements: Photoinitiators, additives, monomers, modifiers, and oligomers. (Figure 1).

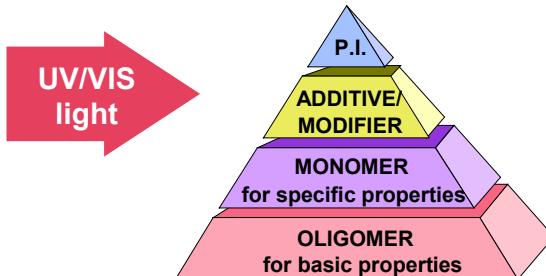


Figure 1. Typical Light Curing Urethane Acrylate Adhesive

**Photoinitiator (P.I.)** – Component of the UV Masking Resin that begins the polymerization (curing) process when exposed to UV light energy of a compatible wavelength. In dual curing resins, a secondary initiator may also be included which utilizes heat to begin polymerization. Dual cure resins are used in areas where UV light cannot reach and fully cure the masking resin, such as core cavities.

**Additives** – Filler chemicals that are used to add or enhance specific resin properties such as flow rate, wetting, tack-free surfaces, color or fluorescence.

**Modifiers** – Component of the UV Masking Resin that can increase durability by improving impact and crack resistance of the resin.

**Monomers** – Single units of polymers which provide adhesion to surface materials such as titanium, aluminum, iron, and nickel or cobalt based super alloys.

**Oligomers** – Oligomers are the backbone of the resin and are comprised of medium length polymer units which provide the basic properties of the UV Masking Resin such as hardness, elongation, and chemical resistance.

## How Do UV Curable Masks Work?

The UV light curing process begins when the photoinitiator in the mask is exposed to a UV light energy source of the proper spectral output. Its molecules split into free radicals (initiation), which then begin to form polymer chains with the monomers, oligomers, and other ingredients (propagation), until all of the ingredients have formed a solid polymer (termination). (Figure 2). What was once a liquid, is now a solid resin.

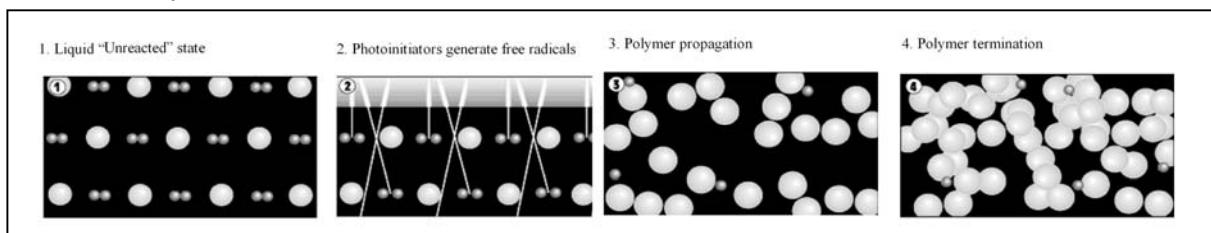


Figure 2. UV Light Cure Process

## UV Curing Systems

Critical to the UV mask curing process is an ultraviolet light energy source. Several types of UV curing lamps and systems are commercially available. Spectral output of the lamp, intensity, component configuration, desired production throughput, and budget are all factors that help determine which type of UV curing system is appropriate.

UV lamps may be grouped into two very broad categories, spot lamps and flood lamps. UV spot lamps generate high intensity UV energy that is directed through a fiber or liquid filled light guide, typically 5-8 mm in diameter. (Figure 3). These units are ideal for curing UV Masking Resins in cooling holes or sealing off core cavities. For larger surfaces like airfoils and housings, flood lamps can be used which create light footprints up to 8" square. (Figure 4).



Figure 3. 200 Watt Spot Lamp  
with Single Pole Lightguide



Figure 4. Flood Lamp  
with Enclosure

Systems are also available that combine curing lamps with dispensers or conveyors for semi-automated production. (Figure 5 and Figure 6). This permits continuous in-line processing of components with no delays.



Figure 5. Spot Lamp with Dispenser



Figure 6. Conveyor with  
Overhead Curing Lamps

Once the appropriate curing process is established for a masked component, it cannot be varied without requalifying the process. This ensures complete cure of the UV masking resin each and every time, which is essential for optimal adhesion and protection. The best source for assistance in selecting a curing system and qualifying a curing process is the manufacturer of the UV Masking Resin. Their expertise with UV Masking Resins and UV curing systems can help to implement a UV masking process with minimal time and expense.

## What Different Types Of UV Curable Masking Resins Are Available?

There are three basic grades of UV masking resins. They can be grouped by their removal mechanism: burn-off, peelable, or water soluble.

### Burn-Off Masking Resins

These grades typically offer the best surface adhesion and provide the greatest resistance to heat and aggressive chemical solutions such as acid/alkali baths. Some burn-off grades also offer a secondary heat curing capability for masking areas where UV light cannot penetrate. The heat curable grades can be used for core cavity sealing to protect from debris, plating baths, and laser burn-through during drilling operations. Surface curing with UV light may take 20-30 seconds under a flood lamp, while heat curing may require 30-45 minutes in a 300° F oven. Cure times can be slightly higher or lower based on the volume of maskant applied and size and configuration of the component.

The removal process for a burn-off grade mask requires the components to be baked in an air-enriched furnace between 900° F and 1400° F. Typically, the higher the temperature, the shorter the bake cycle. However, duration of the bake cycle must be qualified for each specific series of masked components. Variables such as volume of mask applied, location of the mask (surface or core cavity), and thermal conductivity of the component will factor into determining the appropriate cycle time. Complete burn-off can be achieved in as little as 15 minutes for thinly coated surfaces. For core cavities, cooling holes, or thick mask coatings, a bake cycle of one hour or slightly longer may be required.

Obviously, burn-off masks are limited to parts that can tolerate high heat, such as the "hot" components of a turbine engine. In many cases, an existing heat treating operation may also be used to burn-off the mask. The burn-off process effectively incinerates the mask leaving no residue on the component surface. The composition of the UV Curable Mask allows it to completely combust and be exhausted from the furnace. And, the metallurgy of the heat-treated component remains unaffected by the UV Curable Masking Resin.

A combustion study was conducted on a family of burn-off grade UV Curable Masking Resins by Oekometric GmbH – The Bayreuth Institute of Environmental Research in Bayreuth, Germany (Report No. 121/01 May 2001). The objective of the study was to evaluate potentially hazardous decomposition products that may be formed during the combustion of products based on polyurethane oligomers (UV Masking Resins). The study and subsequent report concluded that combustion of these UV Curable Masking Resins creates fume gases which do not pose a risk in the workplace. In fact, combustion fume gases from this family of UV Masking Resins were likened to those fume gases generated through combustion of other organic materials, including natural polymers such as beechwood.

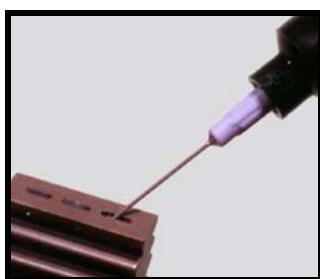


Figure 7. Core filling with a Burn-Off Masking Resin



Figure 8. Removal of a Peelable Masking Resin

## Peelable Masking Resins

Perhaps the most versatile of UV Masking Resins, the peelable grades, provide good adhesion to most clean, metal surfaces, are resilient enough to withstand a variety of surface treatment processes, and can be removed through a simple peeling process. (Figure 8). Cured in a few seconds with UV light, peelable masks have been successfully qualified for surface protection in processes such as grit blasting, shot peening, acid cleaning, plating and anodized coatings. The surface bond is very strong and durable, possessing sufficient adhesion to survive through multiple surface cleaning and processing operations, eliminating the need to strip and remask between processes. Peelable UV Masking Resins offer uniform adhesion from edge to edge, preventing processing media from creeping underneath.


Peelable UV Masks are removed by prying up an edge manually or with the help of a non-abrasive tool, then pulling. The elasticity of the material typically permits fast removal of the mask in one piece rather than in fractured segments. No residues remain on the surface after the mask is removed. The peeling process is made even easier by warming the cured masking resin to 120–150° F in a warm water bath or oven, or using a localized heating element.

The peeled material, essentially a plastic resin, is non-hazardous and may be disposed of in accordance with local regulations for industrial scrap plastic.

## Water Soluble Masking Resins

Water soluble UV Curable Masks provide excellent protection for “dry” finishing processes such as grit blasting, grinding, shot peening, and plasma spraying (Figure 9). They can be applied using the same methods as the peelable grades. But the truly significant feature of the water soluble grades is their removal mechanism. Unlike the burn-off and peelable grades which are urethane-based, the water soluble masks are formulated with water soluble polymers. As their name suggests, the water soluble grades dissolve in liquid. The ideal removal method utilizes heated water (140°–180° F) and a spray wash or agitated/ultrasonic bath. The mask completely dissolves in the water leaving no residue on the component surface.

A closed-loop aqueous cleaning system is recommended for water soluble mask removal. These systems are commonly found in existing surface finishing operations. It is thus possible to remove the mask and clean the components in the same operation, presenting another cost saving opportunity. The cured UV Masking Resin does not contain any organic or inorganic toxic substances according to EPA, Connecticut, California, and Michigan Waste Discharge Listings. UV Curable Water Soluble Masking Resins dissolved in water exhibit a neutral pH of 7 in up to 20% concentration and do not create a handling hazard to operators.

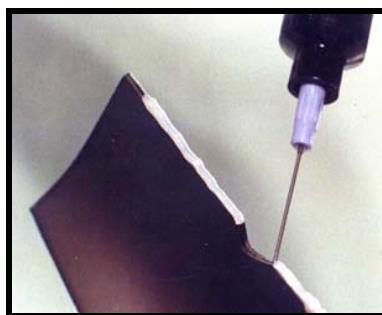

*Figure 9. Sealing with a Water Soluble Masking Resin*

## How Much Can Really Be Saved?

Much emphasis has been placed on the cost savings that result from the use of UV Curable Masking Resins. Some savings are direct and easily calculable. Others, just as significant, are hidden in the indirect costs associated with traditional masking processes.

A detailed cost analysis comparing an existing masking process with a proposed UV masking process can bring actual cost savings into clear focus. In Table 1 below, a comparison is made between a low cost wax maskant and a burn-off grade UV masking resin. The process involves an acid bath cleaning and subsequent grinding of a turbine component. Critical surface dimensions and the inner core of the component must be protected from the acid bath and debris. The wax process requires filling the core through a series of cooling holes and dipping a portion of the component for surface protection.

The UV method utilizes a high viscosity UV resin, permitting the operator to seal all the holes with a syringe type dispenser without filling the core. External surfaces are dipped in a lower viscosity version of the same UV mask. After dispensing, the components are placed under a UV flood lamp for 45 seconds to cure. Through-put for the cleaning and grinding process averages 2,000 units per month. Processed components are valued at \$2,500.00 each.

Table 1

WAX			UV MASKING RESIN		
	Cost Per Unit	Total Time Per 20 Pcs.		Cost Per Unit	Total Time Per 20 Pcs.
Wax (.75 lb. @ \$3.40/lb)	\$2.50	---	UV Mask (.33 lb. @ \$100/lb)	\$33.00	---
Warm parts in oven Labor*: 1 minute each Cycle: 20 minutes per batch	\$1.00 ---	20 min. 20 min.	---	---	---
Apply Wax for acid cleaning Labor: 30 minutes per part	\$30.00	600 min.	Dispense UV Mask and Cure*	\$15.00	300 min.
Remove Wax after acid cleaning Place in hot water bath Labor: 1 minute per part Cycle: 30 minutes per batch	\$1.00 ---	20 min. 30 min.	---	---	---
Rinse and Dry Labor: 1 minute per part Cycle: 15 minutes per batch	\$1.00 ---	20 min. 15 min.	---	---	---
Reapply Wax for grinding	\$30.00	600 min.	---	---	---
Remove Wax Place in hot water bath Labor: 1 minute per part Cycle: 30 minutes per batch	\$1.00 ---	20 min. 30 min.	Burn-off during existing Heat Treat operation	\$0.00	---
Rinse and Dry Labor: 1 minute per part Cycle: 15 minutes per batch	\$1.00 ---	20 min. 15 min.	---	---	---
<b>SUBTOTAL</b>	<b>\$67.50</b>	<b>1410 min.</b>	<b>SUBTOTAL</b>	<b>\$48.00</b>	<b>300 min.</b>
Scrap: 0.5% amortized per unit	\$12.50	---	Scrap: 0%	\$0.00	---
<b>TOTAL</b>	<b>\$80.00</b>	<b>1410 min.</b>	<b>TOTAL</b>	<b>\$48.00</b>	<b>300 min.</b>
Equipment	---		Equipment (UV Lamp)		\$2,500.00

\*Cost of labor for both processes calculated at \$60/hour

In the example in Table 1, several cost factors are reduced or eliminated by switching to a UV Curing Masking Resin. Less material is used due to the controlled viscosity of the resin. The resiliency and tenacious adhesion of the UV Curing Masking Resin eliminates stripping and remasking of the components between the cleaning and grinding processes. Scrap is reduced from 0.5% to zero. As components can range from several hundred to many thousands of dollars in value, the reduction in scrap alone is a significant factor. These reductions transform into a process cost savings of \$32.00 per unit, a 40% reduction. Most astounding is that the 20 piece batches can be masked in less than one quarter of the time, saving nearly one hour per piece. This permits faster turnaround for overhaul programs and higher throughput for new component productions. From the magnitude of these cost

savings, the added capital investment for one UV curing lamp (\$2,500) can easily be recovered in less than one month.

The second example (Table 2) compares conventional tape masking to masking with a UV peelable resin for a plating application.

Table 2

TAPE			UV PEELABLE MASK		
	Cost Per Unit	Cycle Time Per 20 Pcs.		Cost Per Unit	Cycle Time Per 20 Pcs.
One half roll tape @ \$30/roll	\$15.00	---	UV Mask (.33 lb. @ \$100/lb)	\$33.00	---
Apply tape ½ hour per piece	\$30.00*	600 min.	Apply Mask Spray: Labor 1 min. Cure: Labor 1 min.	\$1.00 \$1.00	20 min. 20 min.
Remove tape	\$10.00	10 min.	Peel Mask	\$10.00	10 min.
Wash and Dry (Tape Residue) Labor: 1 minute per part Cycle: 15 minutes per batch	\$1.00 ---	20 min. 15 min.	---	---	---
Rework: 0.5%	\$12.50	60 min.	Rework: 0.0%	\$0.00	---
SUBTOTAL	\$68.50	705 min.	SUBTOTAL	\$45.00	50 min.
Scrap: 0.1%	\$2.50	---	Scrap: 0.0%	\$0.00	---
TOTAL	\$71.00	705 min.	TOTAL	\$45.00	50 min.
Equipment	---		Equipment: UV Lamp Hand Sprayer	\$2,500.00 \$1,500.00	

*\*Cost of labor for both processes calculated at \$60/hour*

The example in Table 2 again reveals a major cost reduction of \$26.00 per unit (37% reduction), resulting from labor saving and the elimination of rework/scrap associated with the tape masking process. The added cost of equipment for the UV process is easily recovered in less than one month.

## Summary

In today's environment, process cost reduction has taken on a greater meaning – survival. Competitive pressures in the market are forcing manufacturers to evaluate every aspect of their processes for cost reduction opportunities. However, age old operations such as masking, are taken for granted and not targeted for improvement.

Alternative masking methods such as UV Curable Masking Resins open the door to savings never before possible. Labor costs can be cut in half, scrap eliminated, and overall component processing time reduced by as much as 60-70%. In addition to cost cutting opportunities, UV Curable Masking Resins improve the quality of the environment in the workplace, removing health hazards and reducing risk of operator injury. Benefits of this nature can lead to improved employee morale, which contributes to higher productivity.

A very positive case has been built for today's UV Curable Masking Resin Technology. Undoubtedly, more and more masking applications suitable for UV Curable Masks will be identified. The one constant that will continue to drive these applications will be cost reduction and improved productivity in the workplace.

## BIBLIOGRAPHY

Bachmann, Clai, "Expanding Capabilities With UV/Visible Light Curing Adhesives", Adhesives Age, April 1995.

Bachmann, Clai, "Light Curing Assembly: A Review and Update", Wavelength Magazine, May 1999, Issue 1.3.

Swist, Peter M., "Aerobic Adhesives V – Criteria for the Selection and Utilization of 100% ODC and Solvent Free Structural Bonding Systems", Conference of the Society of Manufacturing Engineers, May 1993.

Ökometric GmbH, The Bayreuth Institute of Environmental Research, "Combustion of the Polyurethane Oligomer Based Products DYMAX-No. 702, No. 706 and No. 707 and Analysis of Thermal Degradation Products – Final Report No. 121/01", May 2001.

**intertronics**

adhesives, coatings, sealants & equipment  
for your manufacturing and technology applications

**t** 01865 842842

**e** [info@intertronics.co.uk](mailto:info@intertronics.co.uk)

**www.intertronics.co.uk**

© 2002, 2005 DYMAX Corporation

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. DYMAX does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in DYMAX's standard Conditions of Sale. DYMAX does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than DYMAX or act as a grant of license under any DYMAX Corporation Patent. DYMAX recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide.

LIT.169 8/2002

**DYMAX Corporation** - 51 Greenwoods Road - Torrington, CT 06790 - Phone: 860-482-1010 - Fax: 860-496-0608  
E-mail: [info@dymax.com](mailto:info@dymax.com) - [www.dymax.com](http://www.dymax.com)

**DYMAX Europe GmbH** - Trakehner Strasse 3 - D-60487 Frankfurt am Main - Germany - Phone: 0049-69-7165-3568  
Fax: 0049-69-7165-3830 - E-mail: [dymaxinfo@dymax.de](mailto:dymaxinfo@dymax.de)



DYMAX®, Light-Weld®, Light-Welder®, Multi-Cure®, Ultra Light-Weld®, MEDI-CURE® and MD® are trademarks of DYMAX Corporation